
# **Energy Management Energy Meter Type EM21 72D**



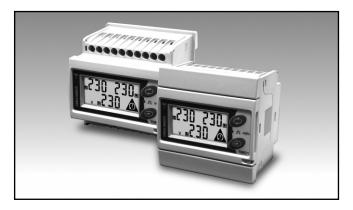

- Certified according to MID Directive (option PF only): see "how to order" below
- Not-certified version available (option X): see "how to order" on the next page.

- Class B (kWh) according to EN50470-3
- Class 1 (kWh) according to EN62053-21
- Class 2 (kvarh) according to EN62053-23
- Accuracy ±0.5 RDG (current/voltage)
- Energy meter
- Instantaneous variables readout: 3 DGT
- Energies readout: 7 DGT
- System variables: W, var, PF, Hz, Phase-sequence.
- Single phase variables: V<sub>LL</sub>, V<sub>LN</sub>, A, PF
- Energy measurements: total kWh and kvarh
- TRMS measurements of distorted sine waves (voltages/currents)
- Self power supply
- Dimensions: 4-DIN modules and 72x72mm
- Protection degree (front): IP50
- Application adaptable display and programming procedure (Easyprog function)
- Easy connections management
- Detachable display

Power supply

• Multi-use housing: for both DIN-rail and panel mounting applications

#### **Product Description**

Three-phase energy meter with removable front LCD display unit. The same unit can be used either as a DIN-rail mounting or a panel mounting energy meter. This general purpose three-phase energy meter is suitable for both active and reactive energy metering for cost allocation but also for main electrical parameter measurement and retransmission (transducer function). Housing for DIN-rail mounting with IP50

(front) protection degree. Current measurements carried out by means of external current transformers and voltage measurements carried out either by means of direct connection or by means of potential transformers. EM21-72D is provided, as standard, with a pulsating output for active energy retransmission. In addition a 2wire RS485 communication port is available as an option.



Certified according to MID Directive, Annex "B" + Annex "D" for legal metrology relevant to active electrical energy meters (see Annex MI-003 of MID). Can

Custom

be used for fiscal (legal) metrology. Only the total active energy meter is certified according to MID.


#### How to order EM21 72D AV5 3 X O X PF A D

	_
Output 1 —————Output 2 ————Option ————	


#### Type Selection

Range	codes	System			
AV5:	400V <sub>LL</sub> AC, 5(6)A (CT connection) 120/230V <sub>LL</sub> AC 5(6)A (VT/PT and CT connections)	3:	3-phase, 4-wire		
Output	1	Outp	ut 2		
0:	Single static output (optomosfet)	X: S:	None RS485 port		

<b>(</b> :	Self power supply	PF:	
	from 18V to 260VAC		
	VLN, 50 Hz		
	(connection VL1-N)		
40	ating type		

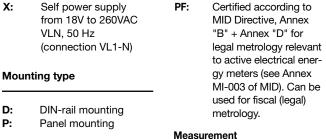

**Options** 



- A: The power is always integrated -both in case of positive (imported) and negative (exported) power
- only the positive (imported) B: power is integrated - no integration in case of negative (exported) power

NOTE: please check the availability of the needed code on the verification path diagram on left before order.



# **STANDARD**

Not certified according to MID directive. Cannot be used for fiscal (legal) metrology.

# Model Range code System Power supply

# **Type Selection**

Single static output

(opto-mosfet)

#### Range codes **System Power supply Options** AV5: 400V<sub>LL</sub> AC, 5(6)A or 3: balanced and X: Self power supply X: none 1(6)A (\*) from 18V to 260VAC unbalanced load: (CT connection) VLN, 45 to 65 Hz 3-phase, 4-wire; AV6: 120/230V<sub>LL</sub> AC 3-phase, 3-wire; (connection VL1-N) 5(6)A or 1(6)A (\*) 2-phase, 3-wire; (VT/PT and 1-phase, 2-wire CT connections) (\*) the range 1(6)A is avail-Output 1 Output 2 able but not in compliance with the EN50470-3 stan-

Output 1 Output 2 Option –

Religion System Power subply Ontbry S Objion 
$$X \rightarrow X$$

AVE  $X \rightarrow X$ 

X:

S:

None

RS485 port

NOTE: please check the availability of the needed code on the verification path

diagram on left before order.

dard.

0:



# Input specifications

Rated inputs Current type	System type: 3 Not isolated (shunt inputs).	Energies	Imported Total: 5+2, 6+1 or 7DGT
	Note: the external current transformers can be con-	Overload status	EEE indication when the value being measured is
Comment veneral (leve CT)	nected to earth individually.		exceeding the "Continuous
Current range (by CT)	AV5 and AV6: 5(6)A. The "1(6)A" range is available		inputs overload" (maximum measurement capacity)
	but not in compliance with the EN50470-3 standard.	Max. and Min. indication	Max. instantaneous vari-
Voltage (direct or by VT/PT)	AV5: 400VLL; AV6: 120/230VLL		ables: 999; energies: 9 999 999. Min. instanta- neous variables: 0; ener-
<b>Accuracy</b> (Display + RS485) (@25°C ±5°C, R.H. ≤60%, 50Hz)	In: see below, Un: see below	LED.	gies 0.00.
AV5 model	In: 5A, Imax: 6A; Un: 160 to	LEDs	Red LED (Energy consumption)
AV6 model	260VLN (277 to 450VLL). In: 5A, Imax: 6A; Un: 40 to		0.001 kWh by pulse if CT ratio x VT ratio is <7;
Current AV5, AV6 models	144VLN (70 to 250VLL). From 0.002In to 0.2In:		0.01 kWh by pulse if CT ratio x VT ratio is ≥ 7.0
·	±(0.5% RDG +3DGT). From 0.2In to Imax:		< 70.0;
	±(0.5% RDG +1DGT).		0.1 kWh by pulse if CT ratio x VT ratio is ≥ 70.0
Phase-neutral voltage	In the range Un: ±(0,5% RDG +1DGT).		< 700.0; 1 kWh by pulse if CT ratio
Phase-phase voltage	In the range Un: ±(1% RDG +1DGT).	Mary for more	x VT ratio is ≥ 700.0;
Frequency	Range: 50Hz;	Max frequency	16Hz, according to EN50470-3
Active power	resolution: ±1Hz ±(1%RDG +2DGT).		Green LED (on the terminal blocks side) for power on
Power Factor	±[0.001+1%(1.000 - "PF		(steady) and communica-
Reactive power	RDG")]. ±(2%RDG +2DGT).		tion status: RX-TX (in case of RS485 option only)
Active energy	class B according to EN50470-1-3;		blinking.
	class 1 according to EN62053-21.	Measurements	See "List of the variables that can be connected to:"
Reactive energy	class 2 according to	Method	TRMS measurements of distorted wave forms.
	EN62053-23. In: 5A, Imax: 6A; 0.1 In:	Coupling type	By means of external CT's.
	0.5A.	Crest factor	In 5A: ≤3 (15A max. peak).
	Start up current: 10mA.	Current Overloads Continuous	6A @ 50H-
Energy additional errors	According to EN62053-21,	For 500ms	6A, @ 50Hz. 120A, @ 50Hz.
Influence quantities	EN50470-1-3, EN62053-23	Voltage Overloads	
Temperature drift	≤200ppm/°C.	Continuous	1.2 Un
Sampling rate	1600 samples/s @ 50Hz, 1900 samples/s @ 60Hz	For 500ms  Current input impedance	2 Un
Display refresh time	1 second	5(6)A  Voltage input impedance	< 0.3VA
Display	2 lines	Self-power supply	Power consumption: <2VA.
	1 <sup>st</sup> line: 7-DGT, 2 <sup>nd</sup> line: 3-DGT or	Frequency	$50 \pm 5$ Hz/ $60 \pm 5$ Hz.
	1 <sup>st</sup> line: 3-DGT + 3-DGT,	Key-pad	Two push buttons for vari-
	2 <sup>nd</sup> line: 3-DGT.	- <del>-</del>	able selection and pro-
Type	LCD, h 7mm.		gramming of the instru- ment working parameters.
Instantaneous variables read-out	3-DGT.		ment working parameters.



# **Output specifications**

Pulse output Number of outputs	1	Connections	2-wire. Max. distance 1000m, termination directly
Туре	Programmable from 0.01 to 9.99 kWh per pulses. Output connectable to the	Addresses	on the instrument. 247, selectable by means of the front keypad
	energy meters (kWh)	Protocol	MODBUS/JBUS (RTU)
Pulse duration	T <sub>OFF</sub> ≥120ms, according to	Data (bidirectional)	
	EN62052-31. T <sub>ON</sub> selectable (30 ms or 100 ms) according to	Dynamic (reading only)	System and phase variables: see table "List of variables"
	EN62053-31	Static (reading and writing)	All the configuration
Output	Static: opto-mosfet.	· · · · · · · · · · · · · · · · ·	parameters.
Load	V <sub>ON</sub> 2.5 VAC/DC max. 70 mA, V <sub>OFF</sub> 260 VAC/DC max.	Data format	1 start bit, 8 data bit, no parity,1 stop bit.
Insulation	By means of optocouplers,	Baud-rate	9600 bits/s.
	4000 VRMS output to measuring inputs.	Driver input capability	1/5 unit load. Maximum 160 transceiver on the
RS485			same bus.
Туре	Multidrop, bidirectional (static and dynamic variables)	Insulation	By means of optocouplers, 4000 VRMS output to mea- suring input.

# **Software functions**

Password  1st level 2nd level	Numeric code of max. 3 DGT; 2 protection levels of the pro- gramming data: Password "0", no protection; Password from 1 to 999, all data are protected	Transformer ratio VT (PT) CT	1.0 to 99.9 / 100 to 999 / 1.0 to 99.9 / 100 to 999. The maximum VT by CT ratio is 525 for AV5_PF models, 1187 for AV5_X models.
Programming lock	By means of potentiometer (back-side of the display module) it is possible to lock the access to all the configuration parameters.	Displaying	Up to 3 variables per page. See « Display pages », 3 different set of variables available (see « Display pages ») according to the metering function being
System selection	0		selected.
System 3-Ph.n unbalanced load	3-phase (4-wire) 3-phase (3-wire)	Reset	By means of the front key-
System 3-Ph.1 balanced load	• 3-phase (3-wire) one current and 3-phase to phase voltage		pad: total energies (kWh, kvarh).
Sustana 2 Dla	measurements. Note: the phase to phase voltage is calculated multiplying by 1.73 the virtual phase to neutral voltage.  • 3-phase (4-wire) one current and 3-phase to neutral voltage measurements. Note: the phase to phase voltage is calculated multiplying by 1.73 the virtual phase to neutral voltage.  • 3-phase (2-wire) one current and 1-phase (L1) to neutral voltage measurement.	Easy connection function	Wrong phase detection and displaying. For all the display selections (except "D") the current, power and energy measurement are independent on the current direction.
System 2-Ph System 1-Ph	2-phase (3-wire) 1-phase (2-wire)		



# **General specifications**

Operating temperature	-25°C to +55°C (-13°F to 131°F) (R.H. from 0 to 90% non-condensing @ 40°C) according to EN62053-21	Surge  Radio frequency suppression	On current and voltage measuring inputs circuit: 6kV; According to CISPR 22
	and EN62053-23.	Standard compliance	
Storage temperature	-30°C to +70°C (-22°F to 158°F) (R.H. < 90% non-condensing @ 40°C) according to EN62053-21 and EN62053-23.	Safety	IEC60664, IEC61010-1 EN60664, EN61010-1 EN62052-11 EN62053-21, EN62053-23, EN50470-3
Installation category	Cat. III (IEC60664, EN60664).	Pulse output Approvals	DIN43864, IEC62053-31 CE, cULus listed, MID (PF option only)
Insulation (for 1 minute)	4000 VRMS between measuring inputs and digital output.	Connections Cable cross-section area	Screw-type 2.4 x 3.5 mm
Dielectric strength	4000 VRMS for 1 minute.		Min./Max. screws tighten- ing torque: 0.4 Nm / 0.8 Nm
Noise rejection CMRR	100 dB, 48 to 62 Hz.	Housing	ing torque. 0.4 Min / 0.8 Min
EMC Electrostatic discharges Immunity to irradiated Electromagnetic fields  Burst Immunity to conducted disturbances	According to EN62052-11 15kV air discharge; Test with current: 10V/m from 80 to 2000MHz; Test without any current: 30V/m from 80 to 2000MHz; On current and voltage measuring inputs circuit: 4kV	Dimensions (WxHxD) Material  Mounting  Protection degree Front Screw terminals  Weight	72 x 72 x 65 mm Noryl PA66, self-extinguishing: UL 94 V-0 Panel and DIN-rail  IP50 IP20  Approx. 400 g (packing included)
disturbances	10V/m from 15UKHz to 80MHz		

# Power supply specifications

Self power supply	18 to 260VAC (48-62Hz). Across input "VL1" and "N"	Power consumption	≤2VA/1W
-------------------	---	-------------------	---------

# Insulation between inputs and outputs


	Measuring Inputs	Measuring Inputs Opto-Mosfet output		Self power supply
Measuring Inputs	-	4kV	4kV	0kV
Opto-Mosfet output	4kV	-	-	4kV
Communication port	4kV	-	-	4kV
Self power supply	0kV	4kV	4kV	-

**NOTE:** all the models have, mandatorily, to be connected to external current transformers.




#### Accuracy (According to EN50470-3 and EN62053-23)

kWh, accuracy (RDG) depending on the current

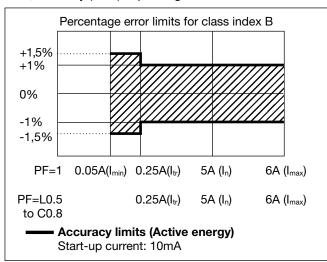

kvarh, accuracy (RDG) depending on the current

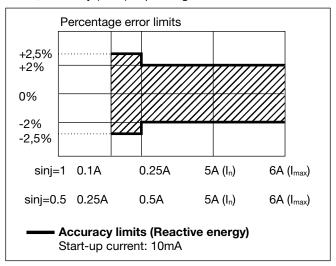

#### MID "Annex MI-003" compliance (PF option only)

Accuracy	$0.98 \text{ fn} \le f \le 1.02 \text{ fn};$ fn: $50\text{Hz};$ cosj: $0.5$ inductive to $0.8$ capacitive. Class B I st: $0.01\text{A}$ ; I min: $0.05\text{A}$ ; I tr: $0.25\text{A}$ ; I n: $5\text{A}$ I max: $6\text{A}$ .  -25°C to +55°C (-13°F to $131^\circ\text{F}$ ) (R.H. from $0$ to $90^\circ$	EMC compliance	E2
	•	Mechanical compliance	M2
	0.98 fn $\leq$ f $\leq$ 1.02 fn; fn: 50Hz; cosj: 0.5 inductive to 0.8 capacitive. Class B I st: 0.01A; I min: 0.05A; I tr: 0.25A; I n: 5A I max: 6A.	Protection degree	in order to achieve the protection against dust and water required by the norms harmonized to MID, the meter must be used only installed in IP51 (or
Operating temperature	131°F) (R.H. from 0 to 90%		better) cabinets.

#### **Used calculation formulas**

#### Phase variables

Instantaneous effective voltage

$$V_{1N} = \sqrt{\frac{1}{n} \cdot \sum_{i=1}^{n} (V_{1N})}$$

 $V_{1N} = \sqrt{\frac{1}{n} \cdot \sum_{i}^{n} (V_{1N})_{i}^{2}}$ Instantaneous active power

$$W_{1} = \frac{1}{n} \cdot \sum_{1}^{n} (V_{1N})_{i} \cdot (A_{1})_{i}$$

Instantaneous power factor

$$\cos \varphi_1 = \frac{W_1}{VA_1}$$

Instantaneous effective current

$$A_1 = \sqrt{\frac{1}{n} \cdot \sum_{1}^{n} (A_1)_i^2}$$

Instantaneous apparent power

$$VA_1 = V_{1N} \cdot A_1$$

Instantaneous reactive power

$$var_1 = \sqrt{(VA_1)^2 - (W_1)^2}$$

#### System variables

Equivalent three-phase voltage

$$V_{\Sigma} = \frac{V_1 + V_2 + V_3}{3} \cdot \sqrt{3}$$

Voltage asymmetry

Three-phase active power

Three-phase apparent power

 $W_{\scriptscriptstyle \Sigma} = W_{\scriptscriptstyle 1} + W_{\scriptscriptstyle 2} + W_{\scriptscriptstyle 3}$ 

 $VA_{\Sigma} = \sqrt{W_{\Sigma}^2 + \text{var}_{\Sigma}^2}$ 

(TPF)

$$\cos \varphi_{\Sigma} = \frac{W_{\Sigma}}{VA_{\Sigma}}$$

#### **Energy metering**

$$k \operatorname{var} hi = \int_{t_1}^{t_2} Qi(t) dt \cong \Delta t \sum_{t_1}^{n_2} Qt dt$$

$$kWhi = \int_{t_1}^{t_2} Pi(t) dt \cong \Delta t \sum_{r=1}^{n_2} Pnj$$

i= considered phase (L1, L2 or L3) P= active power; Q= reactive power; t<sub>1</sub>, t<sub>2</sub> = starting and ending time points of consumption recording; n= time unit;  $\Delta t$ = time interval between two successive power consumptions;  $\mathbf{n_1}$ ,  $\mathbf{n_2}$  = starting and ending discrete time points of consumption recording



#### List of the variables that can be connected to:

- RS485 communication port
- Pulse outputs (only "energies")

No	Variable	1-ph. sys.	2-ph. sys.	3-ph. 4-wire balanced system	3-ph. 3-wir balanced system	3-ph. 4-wire unbalanced system	3-ph. 3-wir unbalanced system	Notes
1	kWh	Х	Х	Х	Х	х	Х	Total
2	kvarh	Х	Х	х	Х	х	Х	Total
3	V L-N sys (1)	0	Х	х	Х	х	Х	sys=system (∑)
4	V L1	Х	Х	х	Х	х	Х	
5	V L2	0	Х	х	Х	х	х	
6	V L3	0	0	х	Х	х	Х	
7	V L-L sys (1)	0	Х	х	Х	х	Х	sys=system (∑)
8	V L1-2	0	Х	х	Х	х	Х	
9	V L2-3	0	0	х	Х	х	х	
10	V L3-1	0	0	х	Х	х	Х	
11	A L1	Х	Х	х	Х	х	Х	
12	A L2	0	Х	х	Х	х	Х	
13	A L3	0	0	Х	Х	х	Х	
14	VA sys (1)	Х	Х	х	Х	х	Х	sys=system (∑)
15	VA L1 (1)	Х	Х	х	Х	х	Х	
16	VA L2 (1)	0	Х	х	Х	х	Х	
17	VA L3 (1)	0	0	х	Х	х	Х	
18	var sys	Х	Х	х	Х	х	х	sys=system (∑)
19	var L1 (1)	Х	Х	х	Х	х	Х	
20	var L2 (1)	0	Х	х	Х	х	х	
21	var L3 (1)	0	0	х	Х	х	Х	
22	W sys	Х	Х	Х	Х	х	Х	sys=system (∑)
23	W L1 (1)	Х	Х	Х	Х	Х	Х	
24	W L2 (1)	0	Х	Х	Х	х	Х	
25	W L3 (1)	0	0	х	Х	х	Х	
26	PF sys	Х	Х	х	Х	х	Х	sys=system (∑)
27	PF L1	Х	Х	х	Х	Х	Х	
28	PF L2	0	Х	х	Х	х	Х	
29	PF L3	0	0	х	Х	х	Х	
30	Hz	Х	Х	х	Х	х	х	
31	Phase sequence	0	0	х	X	Х	Х	

- (x) = available
- (o) = not available (zero indication on the display) (1) = Variable available only through the serial communication port RS485

# **Display pages**

No	1st variable 2nd variable 3rd variable Note		Note	P	pplic	ation	S	
INO	(1st half-line)	(2 <sup>nd</sup> half-line)	(2nd line)	Note	Α	В	С	D
		Phase sequence		The phase sequence triangle appears in any page only if there is a phase reverse	х	Х	х	х
1	Tota	l kWh	W sys		Х	х	Х	Х
2	Total	kvarh	kvar sys			Х	Х	Х
3		PF sys	Hz	Indication of C, -C, L, -L depending on the quadrant		х	х	х
4	PF L1	PF L2	PF L3	Indication of C, -C, L, -L depending on the quadrant			х	х
5	A L1	A L2	A L3				Х	Х
6	V L1-2	V L2-3	V L3-1				Х	х
7	V L1	V L2	V L3				Х	Х



# Additional available information on the display

Туре	1st line	2nd line	note
Meter information 1	Y. 2007	r.A0	Year of production and firmware release
Meter information 2	value	LEd (kWh)	KWh per pulse of the LED
Meter information 3	SYS [3P.n]	value	System type and connection type
Meter information 4	Ct rAt.	value	Current transformer ratio
Meter information 5	Ut rAt.	value	Voltage transformer ratio
Meter information 6	PuLSE (kWh)	value	Pulse output: kWh per pulse
Meter information 7	Add	value	Serial communication address
Meter information 8	value	Sn	Secondary address (M-bus protocol)


# List of selectable applications

	Description	Notes	
Α	Active energy meter **	Active energy measurement with some minor parameters	
В	Active and reactive energy meter **	Active and reactive energy measurement with some minor parameters	
С	Full set of variables **	Full set of available variables can be displayed (default selection, except PFB option)	
D	Full set of variables **	Full set of available variables can be displayed + (default in PFB option)	


#### Notes:

- <sup>+</sup> Only in "D" application the actual direction of the current is considered.
- \* Not available with option PF A. \*\* Not available with option PF B.

#### One instrument with double mounting capability

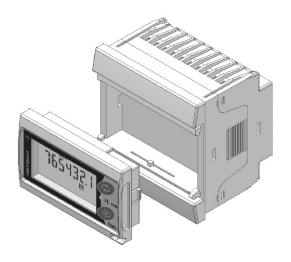


By means of the patented detachable display it is possible to configure the same instrument either as a panel mounting meter or...

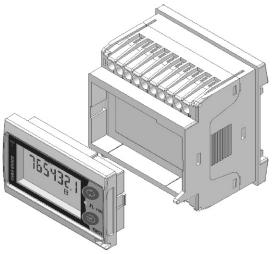


... as DIN-rail mounting meter.




#### Wiring diagrams

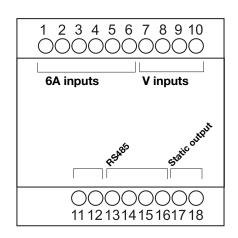



#### (6A) Self power supply, system type selection: 3P.n

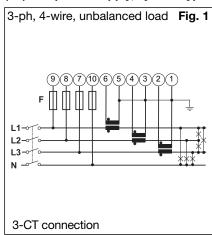


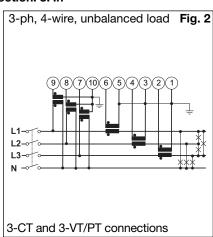


#### (6A) System type selection: 3P.n

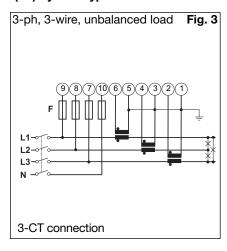


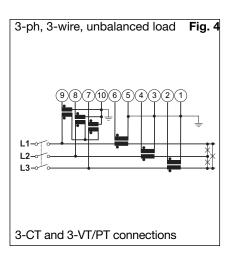


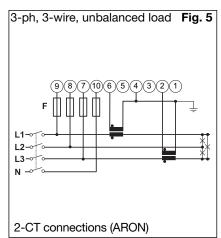

#### (6A) Self power supply, system type selection: 3P.1

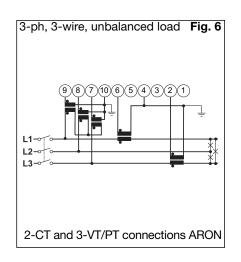

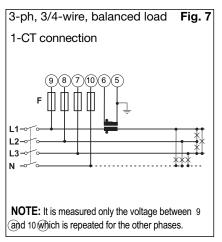

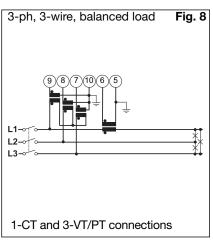



**NOTE:** For a correct power supply of the instrument, the neutral must always be connected.



#### Wiring diagrams

#### (6A) System type selection: 2P

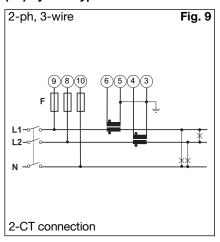

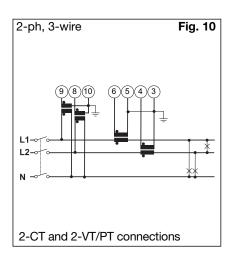



# (6A) System type selection: 1P 1-ph, 2-wire Fig. 11

1-CT connection


# Static output wiring diagram

#### (6A) System type selection: 1P

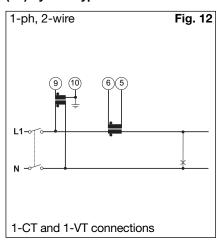

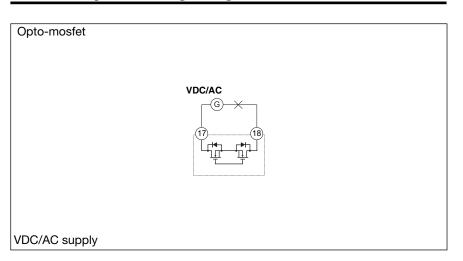


# RS485 port wiring diagram

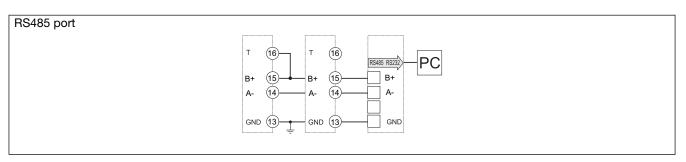

**RS485 NOTE:** additional devices provided with RS485 are connected as per the picture above. The termination of the serial output is carried out only on the last instrument of the network, by means of a jumper between (B+) and (T).



# Front panel description

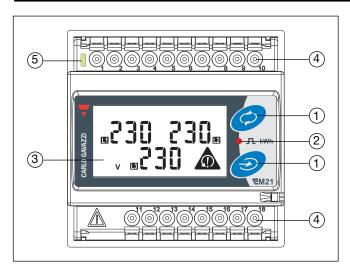

#### 1. Keypad

To program the configuration parameters and scroll the variables on the display.

#### 2. Pulse output LED

Red LED blinking proportional to the energy being measured.

#### 3. Display

LCD-type with alphanumeric indications to display all the measured variables.


#### 4. Connections

Screw terminal blocks for instrument wiring.

#### 5. Green LED

Lit when power supply is available

# **Dimensions (DIN configuration)**

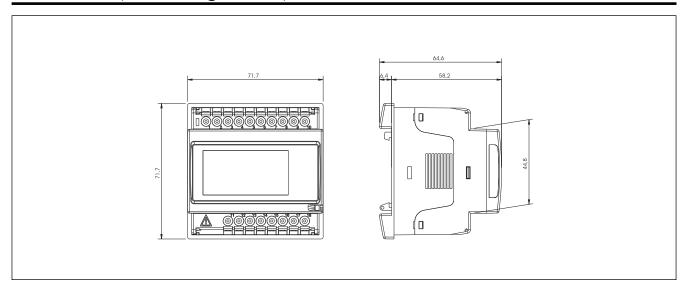

# Dimensions and panel cut out (72x72 panel mounting configuration)

